


Central Brass®

The Easy Choice

Service Sink Faucet

Rigid Pail Hook Spout
Compression Stem Assemblies
Replaceable Seats

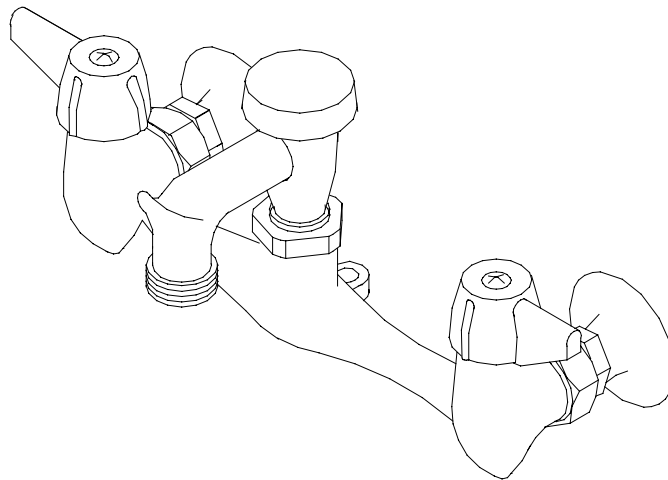

0050 Series



Service Sink Faucet with Vacuum Breaker

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

**CENTRAL BRASS
0050 Series
INSTALLATION INSTRUCTIONS**
"U" Flange Shown

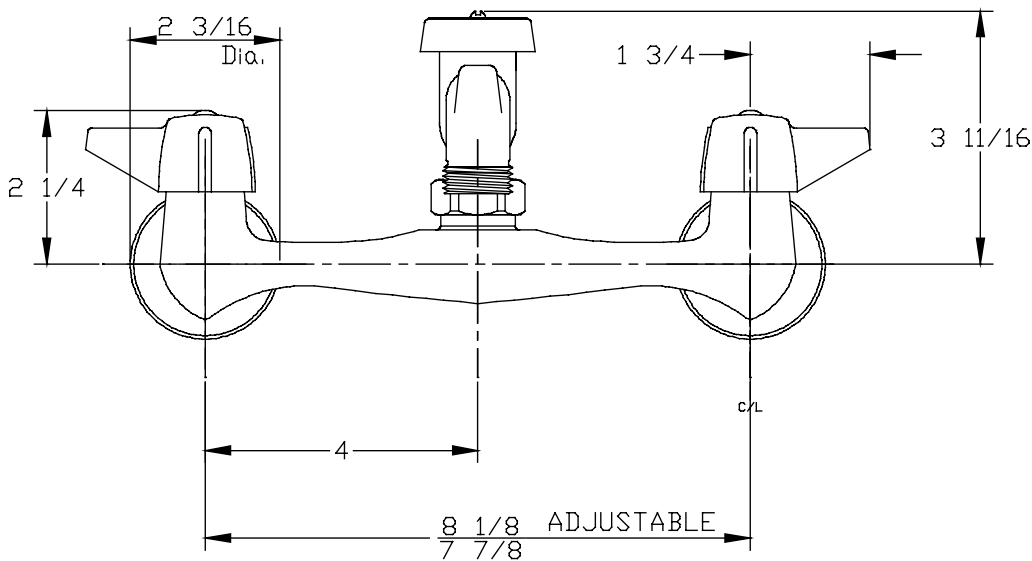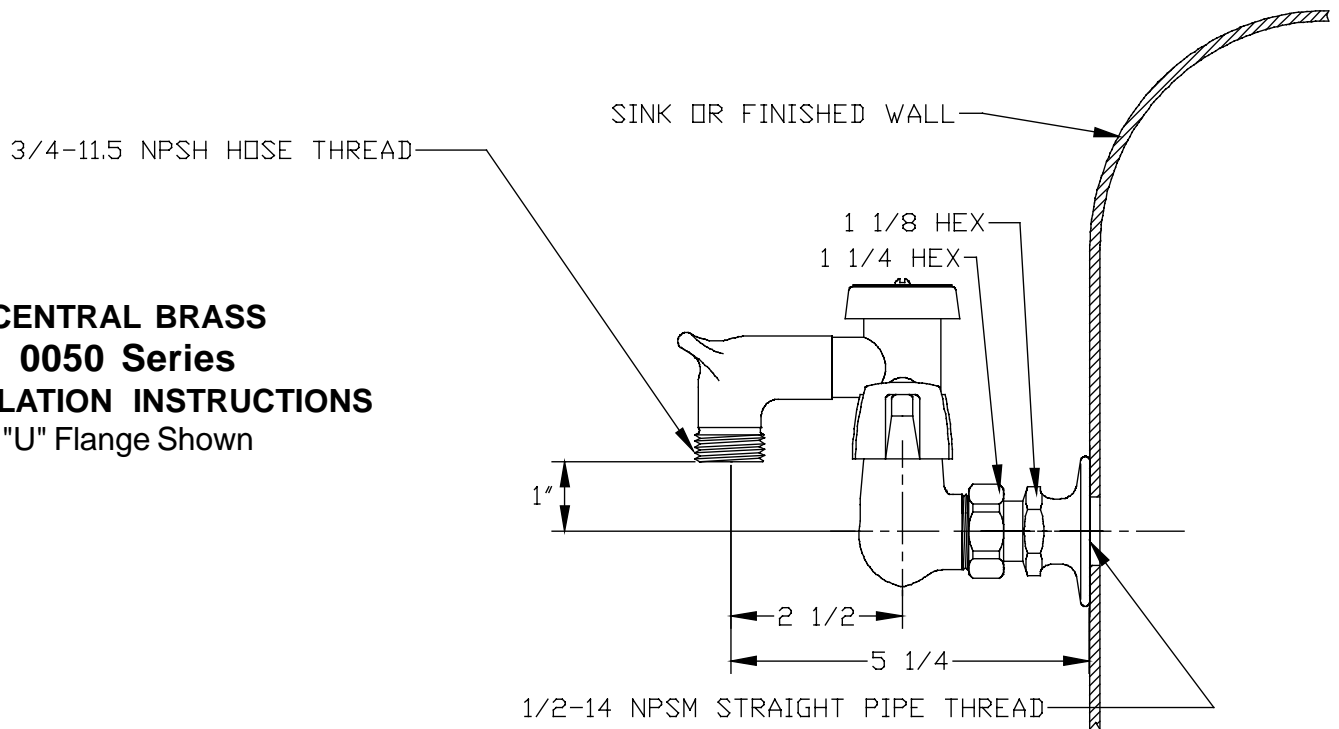

ROUGH-IN Instructions

1. Install supply lines and provide supports.
2. Install wood framing for mounting spout support flange. Be sure framing is secure and properly located.
3. Install finished wall.

FAUCET Installation


1. Install flange arms to supply pipes and adjust location to match 8-inch center connection to faucet.
2. Mount faucet to flange arms and tighten coupling nuts and flanges.
3. **(For items with Intergal stops)** Adjust intergal stop to meter maximum flow.

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

REPLACEMENT PARTS

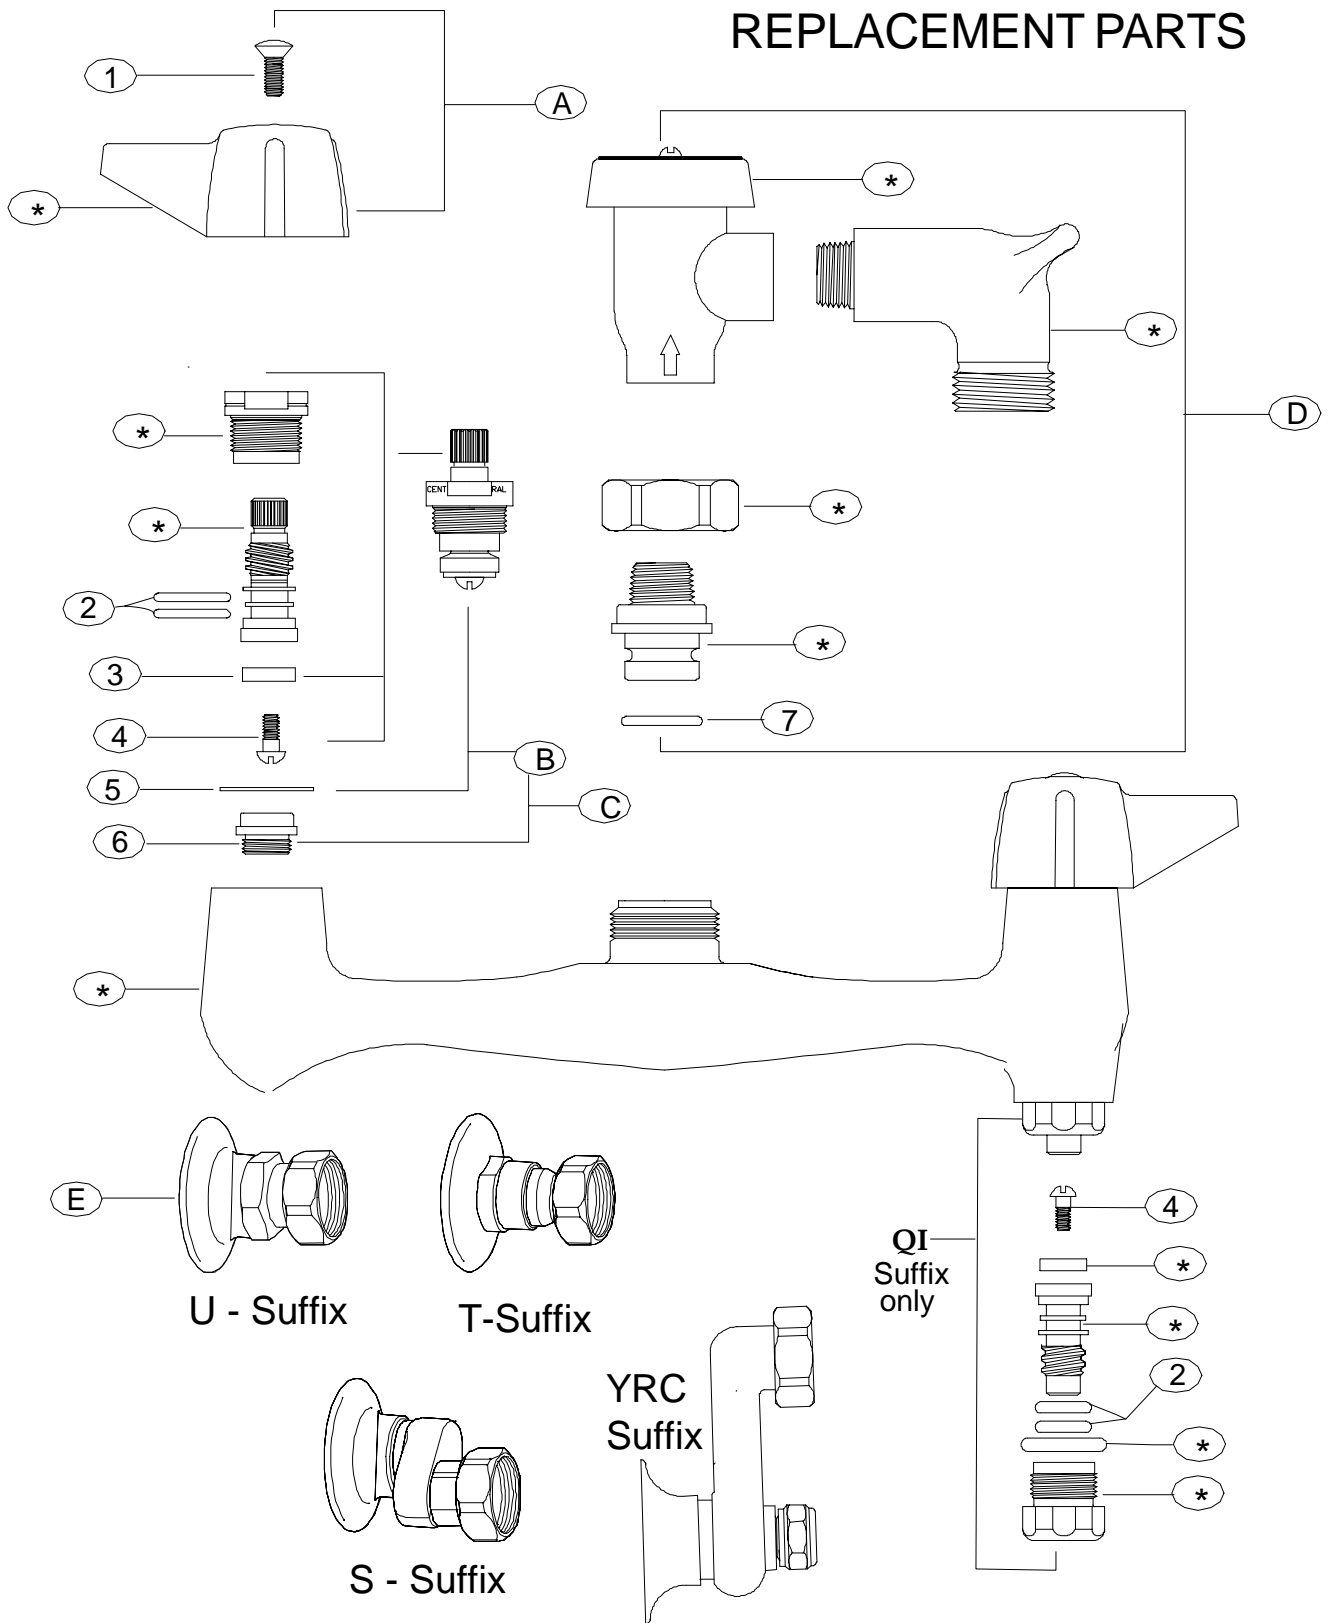

* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales@CentralBrass.com

REPLACEMENT PARTS

#	Part #	Description
A	G-523-C	Lever Handle C Indexed with Screw (X107-F)
A	G-523-H	Lever Handle H Indexed with Screw (X107-F)
B	G-453-EL	Cold O-Ring Stem Assembly with Gasket (X1028-Y)
B	G-453-ER	Hot O-Ring Stem Assembly with Gasket (X1028-Y)
C	K-453-C	Cold O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
C	K-453-H	Hot O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
D	U-1615-50RC	2-1/2-Inch Rigid Spout with Vacuum Breaker
E	SU-2807	Female Flange Adjustable 7 ⁷ / ₈ to 8 ¹ / ₈ inch Centers (U suffix)
E	SU-2846	Male Flange Adjustable 7 ⁷ / ₈ to 8 ¹ / ₈ inch Centers (T suffix)
E	SU-2806	Female Flange Adjustable 6 to 9 ½ inch Centers (S suffix)
E	SU-2841-ARC	Female Flange Adjustable 3 to 13 inch Centers with Integral Stops (YRC suffix)
1	X107-F	Handle Screw (25 pcs per pack)
2	X1038-453	O-Rings (25 pcs per pack)
3	X901-WNN	Stem Seat Washer (25 pcs per pack)
4	X104	Seat Washer Screw (25 pcs per pack)
5	X1028-Y	Gasket (25 pcs per pack)
6	X263-BC	Replacement Seat (10 pcs per pack)
7	X1038-KN	O-Ring for rigid spout (25 pcs per pack)

OPTIONS & REPLACEMENT PARTS for options

Suffix Number	Replaces Item #	Part Number	Description
EL	A	G-4149-C or H	6-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
ELS	A	G-4147-C or H	4-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
X	A	G-1143-C or H	Brass Canopy Handles – Blue Index (X107-FB) or Index Red (X107-FR)
		X107-FB or FR	Blue Index or Red Index (5 pcs per pack) Used for EL, ELS and X suffix's
M	B	G-453-ELM	Cold O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	B	G-453-ERM	Hot O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	6	X263-BM	Monel Replaceable Seat (2 pcs per pack)
M	4	X104-ML	Monel Screw (6 pcs per pack)
Q	B	G-454-EL	Quick-Pression Quarter-Turn Cold O-Ring Stem Assembly with Gasket (X1028-Y)
Q	B	G-454-ER	Quick-Pression Quarter-Turn Hot O-Ring Stem Assembly with Gasket (X1028-Y)



 

 


- If faucet has round handles (70 or 80 suffixes) , use two Hot stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

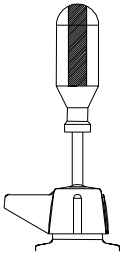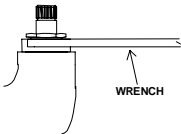CENTRAL BRASS MAINTENANCE INSTRUCTIONS

DISASSEMBLY	REPLACEMENT
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px; font-weight: bold; margin-right: 10px;">1</div> <div> <p>REMOVE HANDLE</p>  <ol style="list-style-type: none"> 1. Turn off water supply. 2. Remove screw. 3. Remove handle. </div> </div> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px; font-weight: bold; margin-right: 10px;">2</div> <div> <p>REMOVE STEM ASSEMBLY</p>  <ol style="list-style-type: none"> 1. Use adjustable wrench. 2. Turn stem to open position 3. Unscrew counter-clockwise. Remove stem unit. </div> </div> </div> <div style="border: 1px solid black; padding: 5px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px; font-weight: bold; margin-right: 10px;">3</div> <div> <p>REMOVE SEAT</p>  <ol style="list-style-type: none"> 1. Insert 5/16" allen wrench in seat. 2. Turn seat counter-clockwise to remove. </div> </div> </div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; text-align: center; line-height: 30px; font-weight: bold; margin-right: 10px;">4</div> <div> <p>Use Only Genuine Central Replacement Parts</p> <p>K-453-C Cold stem assembly with seat & gasket K-453-H Hot stem assembly with seat & gasket G-453-ER Hot stem assembly with gasket G-453-EL Cold stem assembly with gasket G-454-ER Hot stem assembly 1/4 turn with gasket G-454-EL Cold stem assembly 1/4 turn with gasket X263-BC Replaceable Seat (10 per Pack) X1028-Y Nylon Gasket (25 per Pack)</p>     <p style="margin-left: 20px;">Nylon Gasket</p> </div> </div> </div> <p style="text-align: center;">Replace Components In Reverse Order of Disassembly</p>

CENTRAL BRASS MFG CO
 2950 East 55th Street, Cleveland, Ohio 44127
 Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com