


# Central Brass®

The Easy Choice

## Service Sink Faucet

Rigid Pail Hook Spout  
Compression Stem Assemblies  
Replaceable Seats

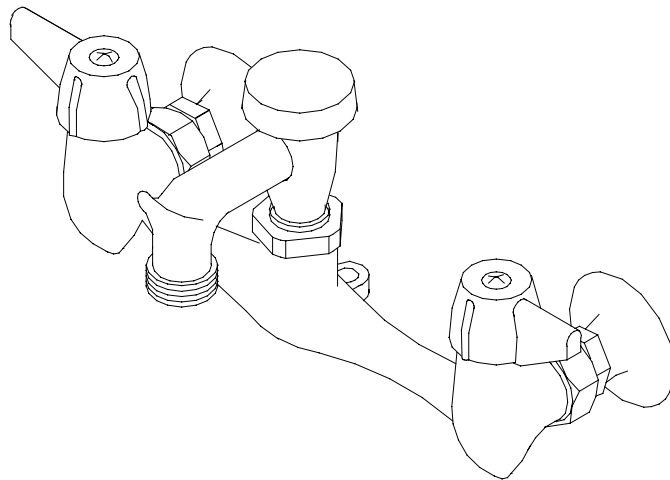

### **0050 Series**



Service Sink Faucet with Vacuum Breaker

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

**CENTRAL BRASS  
0050 Series  
INSTALLATION INSTRUCTIONS**  
"U" Flange Shown

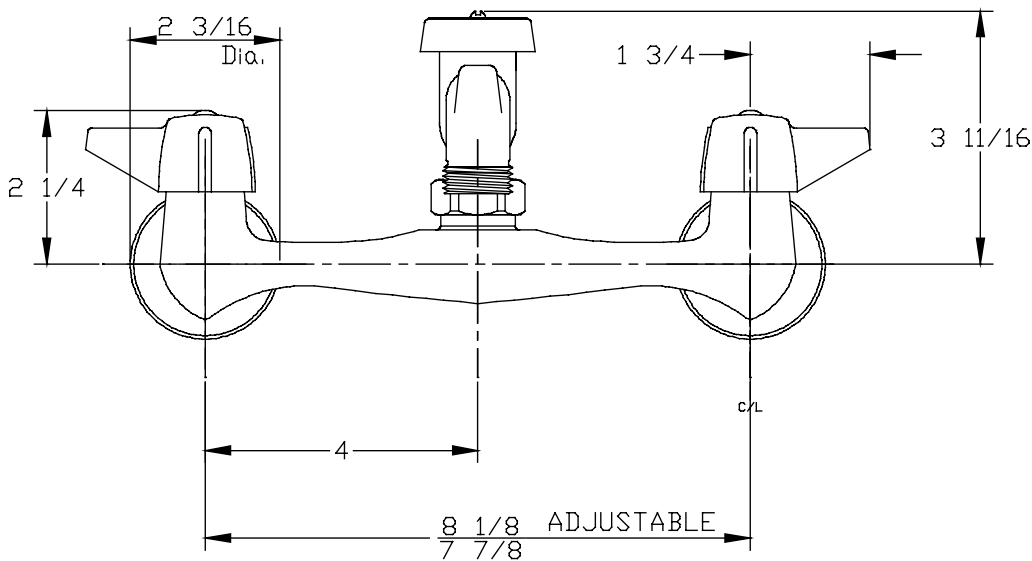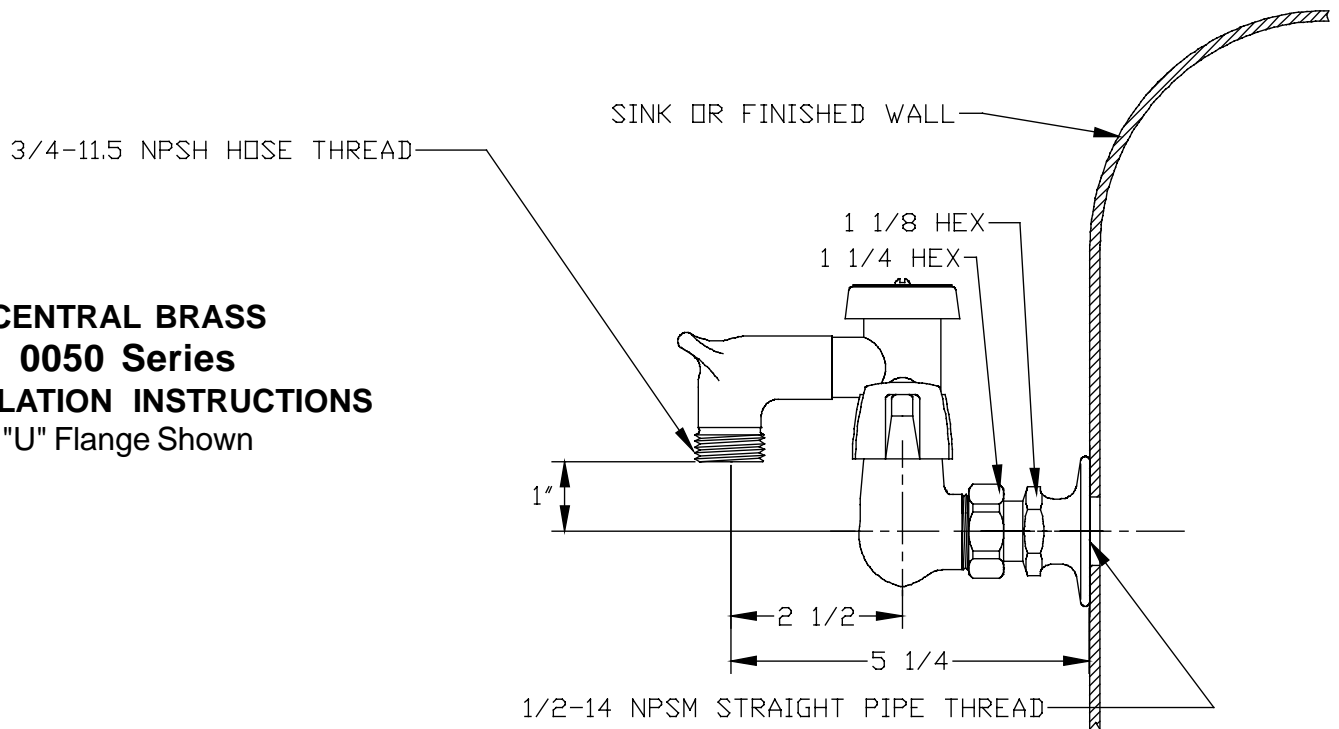

**ROUGH-IN Instructions**

1. Install supply lines and provide supports.
2. Install wood framing for mounting spout support flange. Be sure framing is secure and properly located.
3. Install finished wall.

**FAUCET Installation**


1. Install flange arms to supply pipes and adjust location to match 8-inch center connection to faucet.
2. Mount faucet to flange arms and tighten coupling nuts and flanges.
3. **(For items with Intergal stops)** Adjust intergal stop to meter maximum flow.

**CENTRAL BRASS MFG CO**

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

# REPLACEMENT PARTS

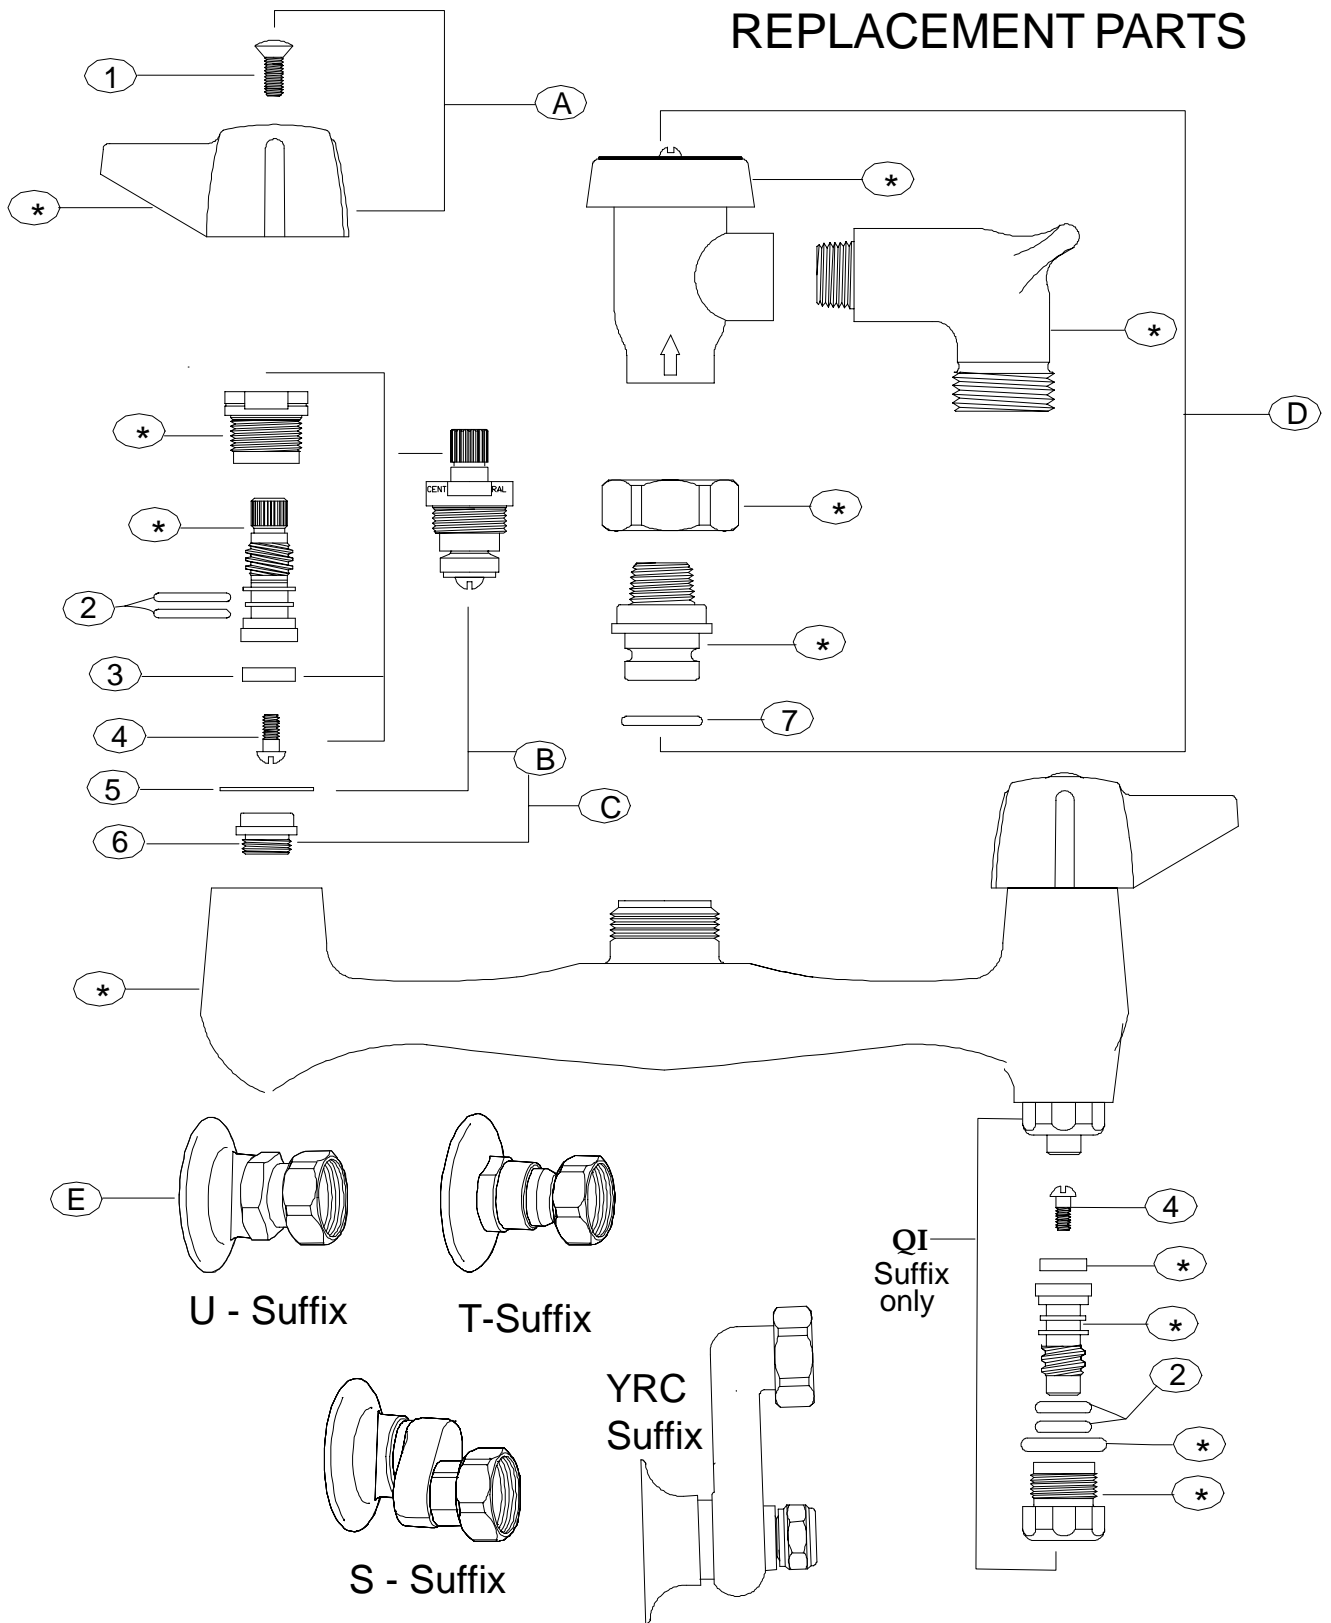

\* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

**CENTRAL BRASS MFG CO**

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales@CentralBrass.com

# REPLACEMENT PARTS

#	Part #	Description
A	G-523-C	Lever Handle C Indexed with Screw (X107-F)
A	G-523-H	Lever Handle H Indexed with Screw (X107-F)
B	G-453-EL	Cold O-Ring Stem Assembly with Gasket (X1028-Y)
B	G-453-ER	Hot O-Ring Stem Assembly with Gasket (X1028-Y)
C	K-453-C	Cold O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
C	K-453-H	Hot O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
D	U-1615-50RC	2-1/2-Inch Rigid Spout with Vacuum Breaker
E	SU-2807	Female Flange Adjustable 7 <sup>7</sup> / <sub>8</sub> to 8 <sup>1</sup> / <sub>8</sub> inch Centers (U suffix)
E	SU-2846	Male Flange Adjustable 7 <sup>7</sup> / <sub>8</sub> to 8 <sup>1</sup> / <sub>8</sub> inch Centers (T suffix)
E	SU-2806	Female Flange Adjustable 6 to 9 ½ inch Centers (S suffix)
E	SU-2841-ARC	Female Flange Adjustable 3 to 13 inch Centers with Integral Stops (YRC suffix)
1	X107-F	Handle Screw (25 pcs per pack)
2	X1038-453	O-Rings (25 pcs per pack)
3	X901-WNN	Stem Seat Washer (25 pcs per pack)
4	X104	Seat Washer Screw (25 pcs per pack)
5	X1028-Y	Gasket (25 pcs per pack)
6	X263-BC	Replacement Seat (10 pcs per pack)
7	X1038-KN	O-Ring for rigid spout (25 pcs per pack)

## OPTIONS & REPLACEMENT PARTS for options

Suffix Number	Replaces Item #	Part Number	Description
EL	A	G-4149-C or H	6-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
ELS	A	G-4147-C or H	4-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
X	A	G-1143-C or H	Brass Canopy Handles – Blue Index (X107-FB) or Index Red (X107-FR)
		X107-FB or FR	Blue Index or Red Index (5 pcs per pack) Used for EL, ELS and X suffix's
M	B	G-453-ELM	Cold O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	B	G-453-ERM	Hot O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	6	X263-BM	Monel Replaceable Seat (2 pcs per pack)
M	4	X104-ML	Monel Screw (6 pcs per pack)
Q	B	G-454-EL	Quick-Pression Quarter-Turn Cold O-Ring Stem Assembly with Gasket (X1028-Y)
Q	B	G-454-ER	Quick-Pression Quarter-Turn Hot O-Ring Stem Assembly with Gasket (X1028-Y)



 

 


- If faucet has round handles (70 or 80 suffixes) , use two Hot stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

## CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com
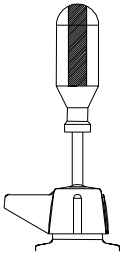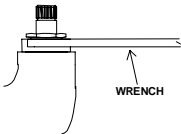
# CENTRAL BRASS MAINTENANCE INSTRUCTIONS

DISASSEMBLY	REPLACEMENT
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin-right: 10px;">1</div> <div> <p><b>REMOVE HANDLE</b></p>  <ol style="list-style-type: none"> <li>1. Turn off water supply.</li> <li>2. Remove screw.</li> <li>3. Remove handle.</li> </ol> </div> </div> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin-right: 10px;">2</div> <div> <p><b>REMOVE STEM ASSEMBLY</b></p>  <ol style="list-style-type: none"> <li>1. Use adjustable wrench.</li> <li>2. Turn stem to open position</li> <li>3. Unscrew counter-clockwise. Remove stem unit.</li> </ol> </div> </div> </div> <div style="border: 1px solid black; padding: 5px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin-right: 10px;">3</div> <div> <p><b>REMOVE SEAT</b></p>  <ol style="list-style-type: none"> <li>1. Insert 5/16" allen wrench in seat.</li> <li>2. Turn seat counter-clockwise to remove.</li> </ol> </div> </div> </div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin-right: 10px;">4</div> <div> <p><b>Use Only Genuine Central Replacement Parts</b></p> <p><b>K-453-C</b> Cold stem assembly with seat &amp; gasket  <b>K-453-H</b> Hot stem assembly with seat &amp; gasket  <b>G-453-ER</b> Hot stem assembly with gasket  <b>G-453-EL</b> Cold stem assembly with gasket  <b>G-454-ER</b> Hot stem assembly 1/4 turn with gasket  <b>G-454-EL</b> Cold stem assembly 1/4 turn with gasket  <b>X263-BC</b> Replaceable Seat (10 per Pack)  <b>X1028-Y</b> Nylon Gasket (25 per Pack)</p>     <p style="margin-left: 20px;">Nylon Gasket</p> </div> </div> </div> <p style="text-align: center;">Replace Components In Reverse Order of Disassembly</p>

**CENTRAL BRASS MFG CO**  
 2950 East 55th Street, Cleveland, Ohio 44127  
 Phone: 216-883-0220    Fax: 216-883-0875    Email: sales @CentralBrass.com