


Central Brass®

The Easy Choice

Service Sink Faucet



Rigid Pail Hook Spout
Compression Stem Assemblies
Replaceable Seats

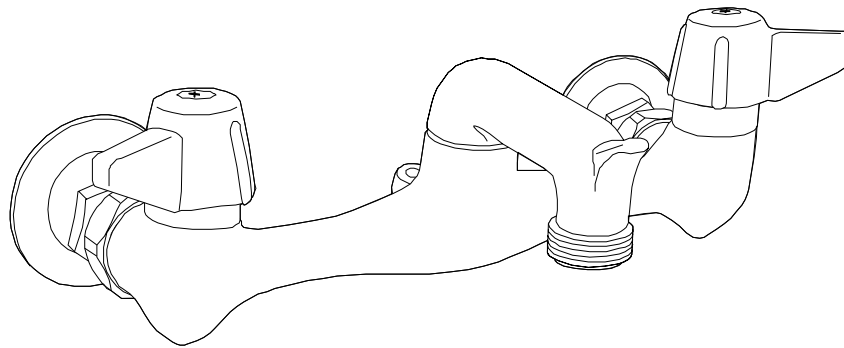

0051 Series

Service Sink Faucet with Rigid Spout

CENTRAL BRASS MFG CO
2950 East 55th Street, Cleveland, Ohio 44127
Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

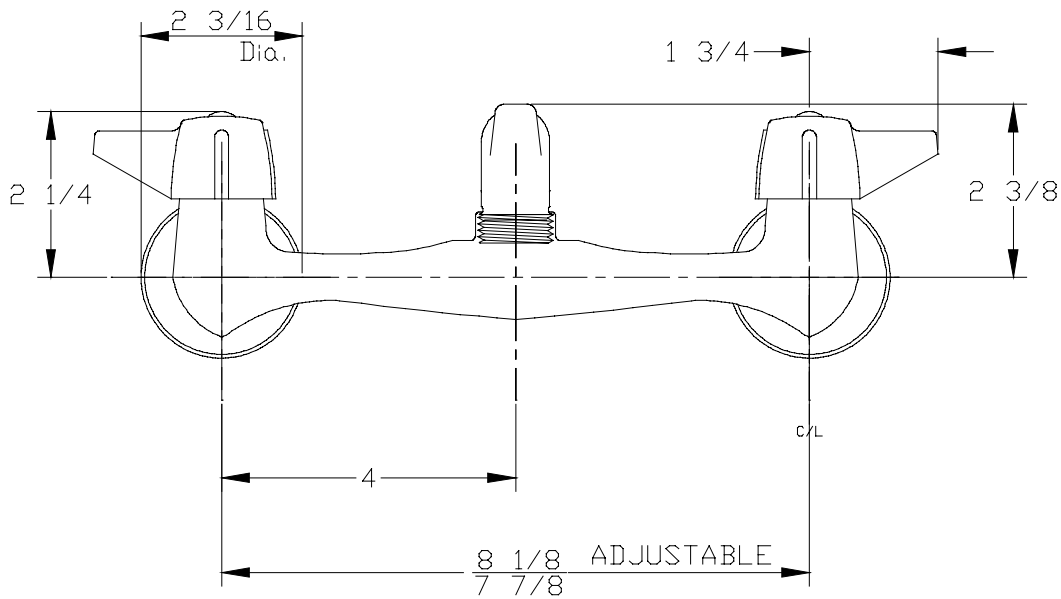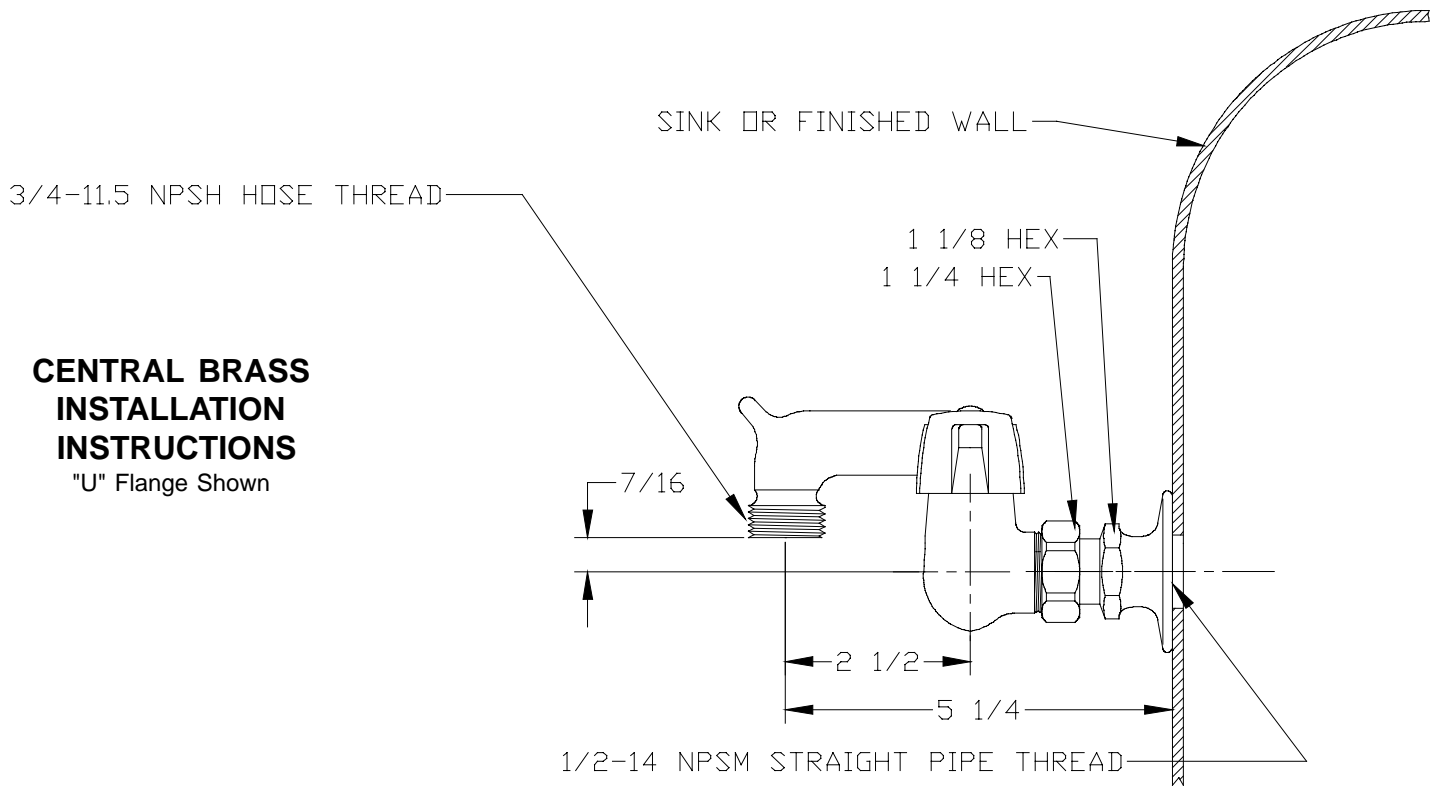

ROUGH-IN Instructions

1. Install supply lines and provide supports.
2. Install wood framing for mounting spout support flange. Be sure framing is secure and properly located.
3. Install finished wall.



FAUCET Installation

1. Install flange arms to supply pipes and adjust location to match 8-inch center connection to faucet.
2. Mount faucet to flange arms and tighten coupling nuts and flanges.





CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127


Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

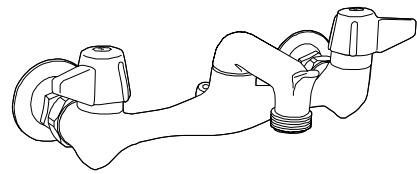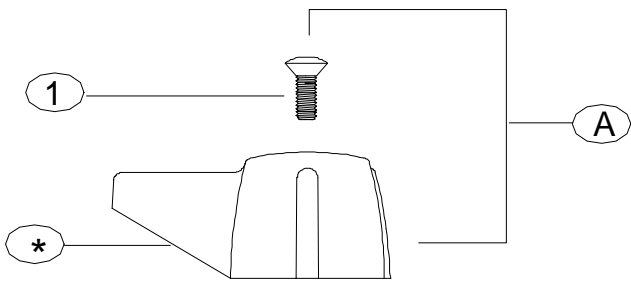


REPLACEMENT PARTS

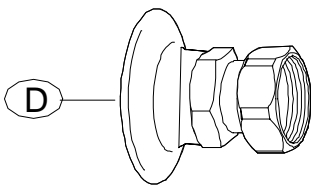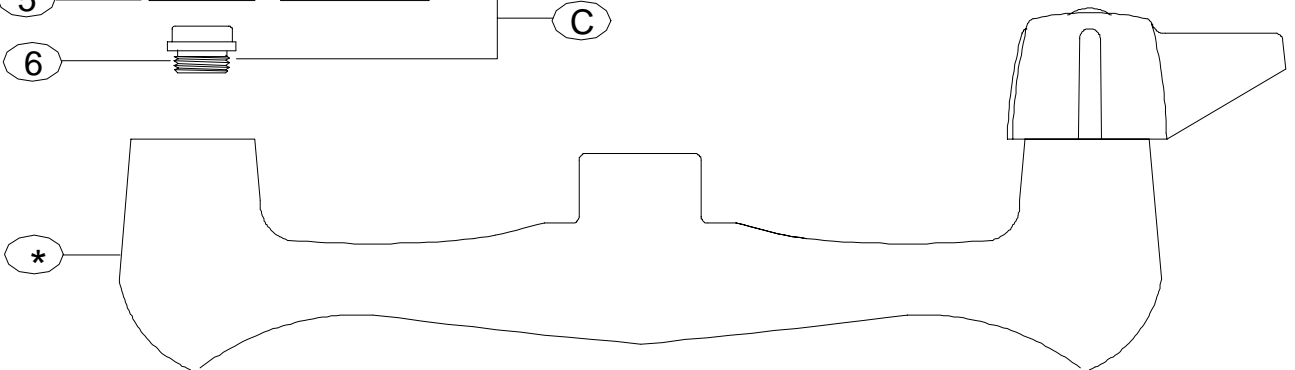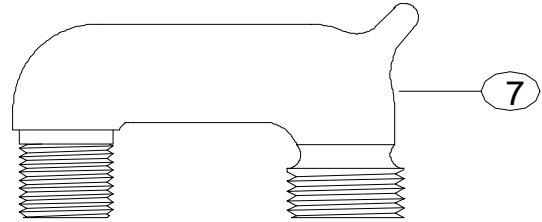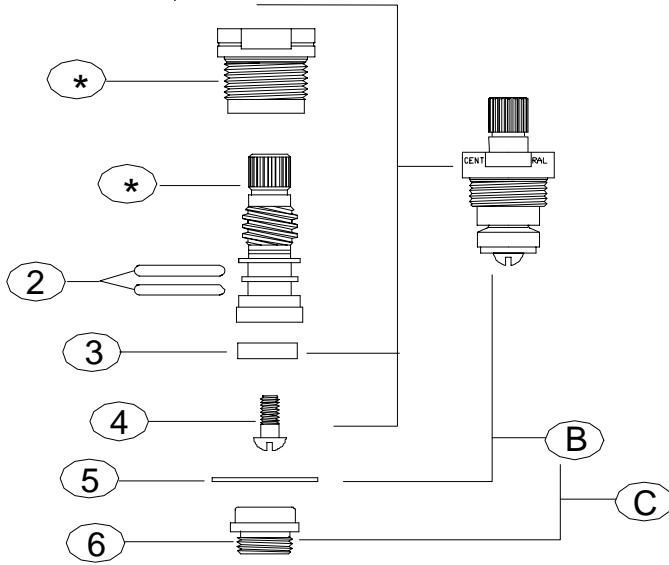

U - Suffix

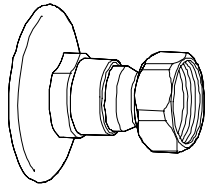


T-Suffix

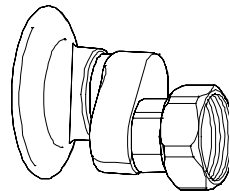

S - Suffix

YRC
Suffix

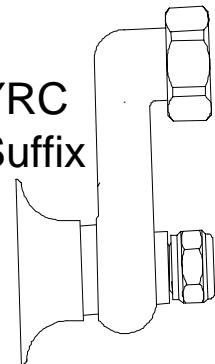

* These items are not offered individually and must be purchased as a group or unit. Please contact Central Brass for more information.

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220

Fax: 216-883-0875

Email: sales @CentralBrass.com

REPLACEMENT PARTS

#	Part #	Description
A	G-523-C	Lever Handle C Indexed with Screw (X107-F)
A	G-523-H	Lever Handle H Indexed with Screw (X107-F)
B	G-453-EL	Cold O-Ring Stem Assembly with Gasket (X1028-Y)
B	G-453-ER	Hot O-Ring Stem Assembly with Gasket (X1028-Y)
C	K-453-C	Cold O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
C	K-453-H	Hot O-Ring Stem Assembly with Gasket (X1028-Y) and Seat (X263-BC)
D	SU-2807	Female Flange Adjustable 7 ⁷ / ₈ to 8 ¹ / ₈ inch Centers (U suffix)
D	SU-2846	Male Flange Adjustable 7 ⁷ / ₈ to 8 ¹ / ₈ inch Centers (T suffix)
D	SU-2806	Female Flange Adjustable 6 to 9 ½ inch Centers (S suffix)
D	SU-2841-ARC	Female Flange Adjustable 3 to 13 inch Centers with Integral Stops (YRC suffix)
1	X107-F	Handle Screw (25 pcs per pack)
2	X1038-453	O-Rings (25 pcs per pack)
3	X901-WNN	Stem Seat Washer (25 pcs per pack)
4	X104	Seat Washer Screw (25 pcs per pack)
5	X1028-Y	Gasket (25 pcs per pack)
6	X263-BC	Replacement Seat (10 pcs per pack)
7	1615-H	Rigid Spout with Pale Hook & Hose End

OPTIONS & REPLACEMENT PARTS for options

Suffix Number	Replaces Item #	Part Number	Description
EL	A	G-4149-C or H	6-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
ELS	A	G-4147-C or H	4-Inch Brass Wrist Handles – Index Blue (X107-FB) or Index Red (X107-FR)
X	A	G-1143-C or H	Brass Canopy Handles – Blue Index (X107-FB) or Index Red (X107-FR)
		X107-FB or FR	Blue Index or Red Index (5 pcs per pack) Used for EL, ELS and X suffix's
M	B	G-453-ELM	Cold O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	B	G-453-ERM	Hot O-Ring Stem Assembly with Monel Screw (X104-ML) and Gasket (X1028-Y)
M	6	X263-BM	Monel Replaceable Seat (2 pcs per pack)
M	4	X104-ML	Monel Screw (6 pcs per pack)





 


- If faucet has round handles (70 or 80 suffixes) , use two Hot stem assemblies
- If faucet has lever handles, use one Hot and one Cold stem assemblies

CENTRAL BRASS MFG CO

2950 East 55th Street, Cleveland, Ohio 44127

Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com

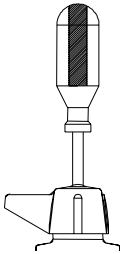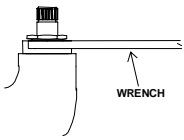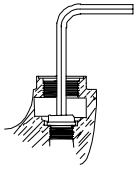CENTRAL BRASS MAINTENANCE INSTRUCTIONS

DISASSEMBLY	REPLACEMENT
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> 1 REMOVE HANDLE </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <ol style="list-style-type: none"> 1. Turn off water supply. 2. Remove screw. 3. Remove handle. </div> </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> 2 REMOVE STEM ASSEMBLY </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <ol style="list-style-type: none"> 1. Use adjustable wrench. 2. Turn stem to open position 3. Unscrew counter-clockwise. Remove stem unit. </div> </div> <div style="border: 1px solid black; padding: 5px;"> 3 REMOVE SEAT </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <ol style="list-style-type: none"> 1. Insert 5/16" allen wrench in seat. 2. Turn seat counter-clockwise to remove. </div> </div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> 4 Use Only Genuine Central Replacement Parts </div> <div style="font-size: small;"> <p>K-453-C Cold stem assembly with seat & gasket</p> <p>K-453-H Hot stem assembly with seat & gasket</p> <p>G-453-ER Hot stem assembly with gasket</p> <p>G-453-EL Cold stem assembly with gasket</p> <p>G-454-ER Hot stem assembly 1/4 turn with gasket</p> <p>G-454-EL Cold stem assembly 1/4 turn with gasket</p> <p>X263-BC Replaceable Seat (10 per Pack)</p> <p>X1028-Y Nylon Gasket (25 per Pack)</p> </div> <div style="text-align: center; margin-top: 20px;">  </div> <div style="text-align: center; margin-top: 20px;">  </div> <div style="text-align: center; margin-top: 20px;">  </div> <div style="display: flex; align-items: center; margin-top: 20px;"> <div style="margin-right: 10px;"> <p>Nylon Gasket</p> </div> <div style="text-align: center;">  </div> </div> <div style="text-align: center; margin-top: 20px;"> <p>Replace Components In Reverse Order of Disassembly</p> </div>

CENTRAL BRASS MFG CO
 2950 East 55th Street, Cleveland, Ohio 44127
 Phone: 216-883-0220 Fax: 216-883-0875 Email: sales @CentralBrass.com